



Parts List

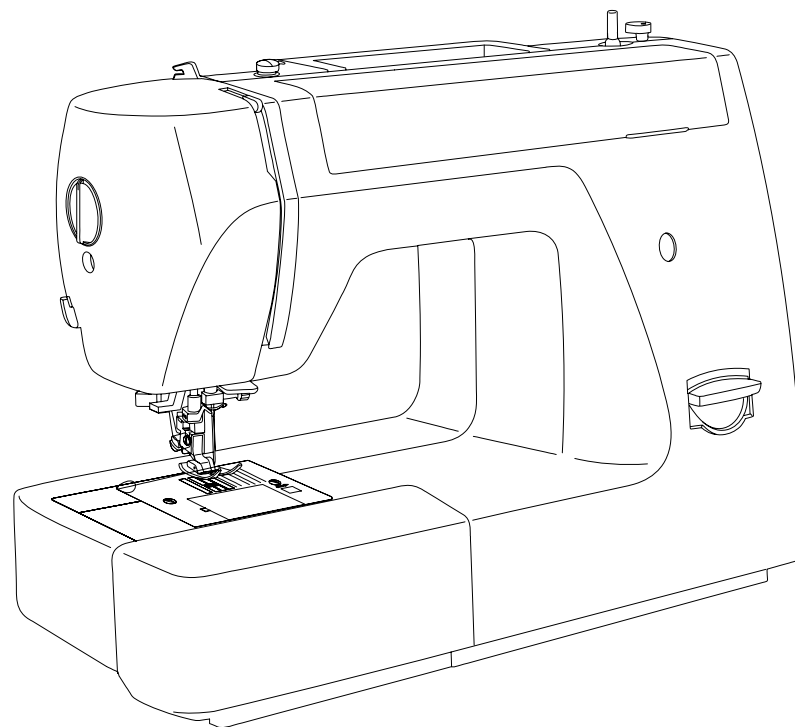

AstraLux 
Model XP41

A

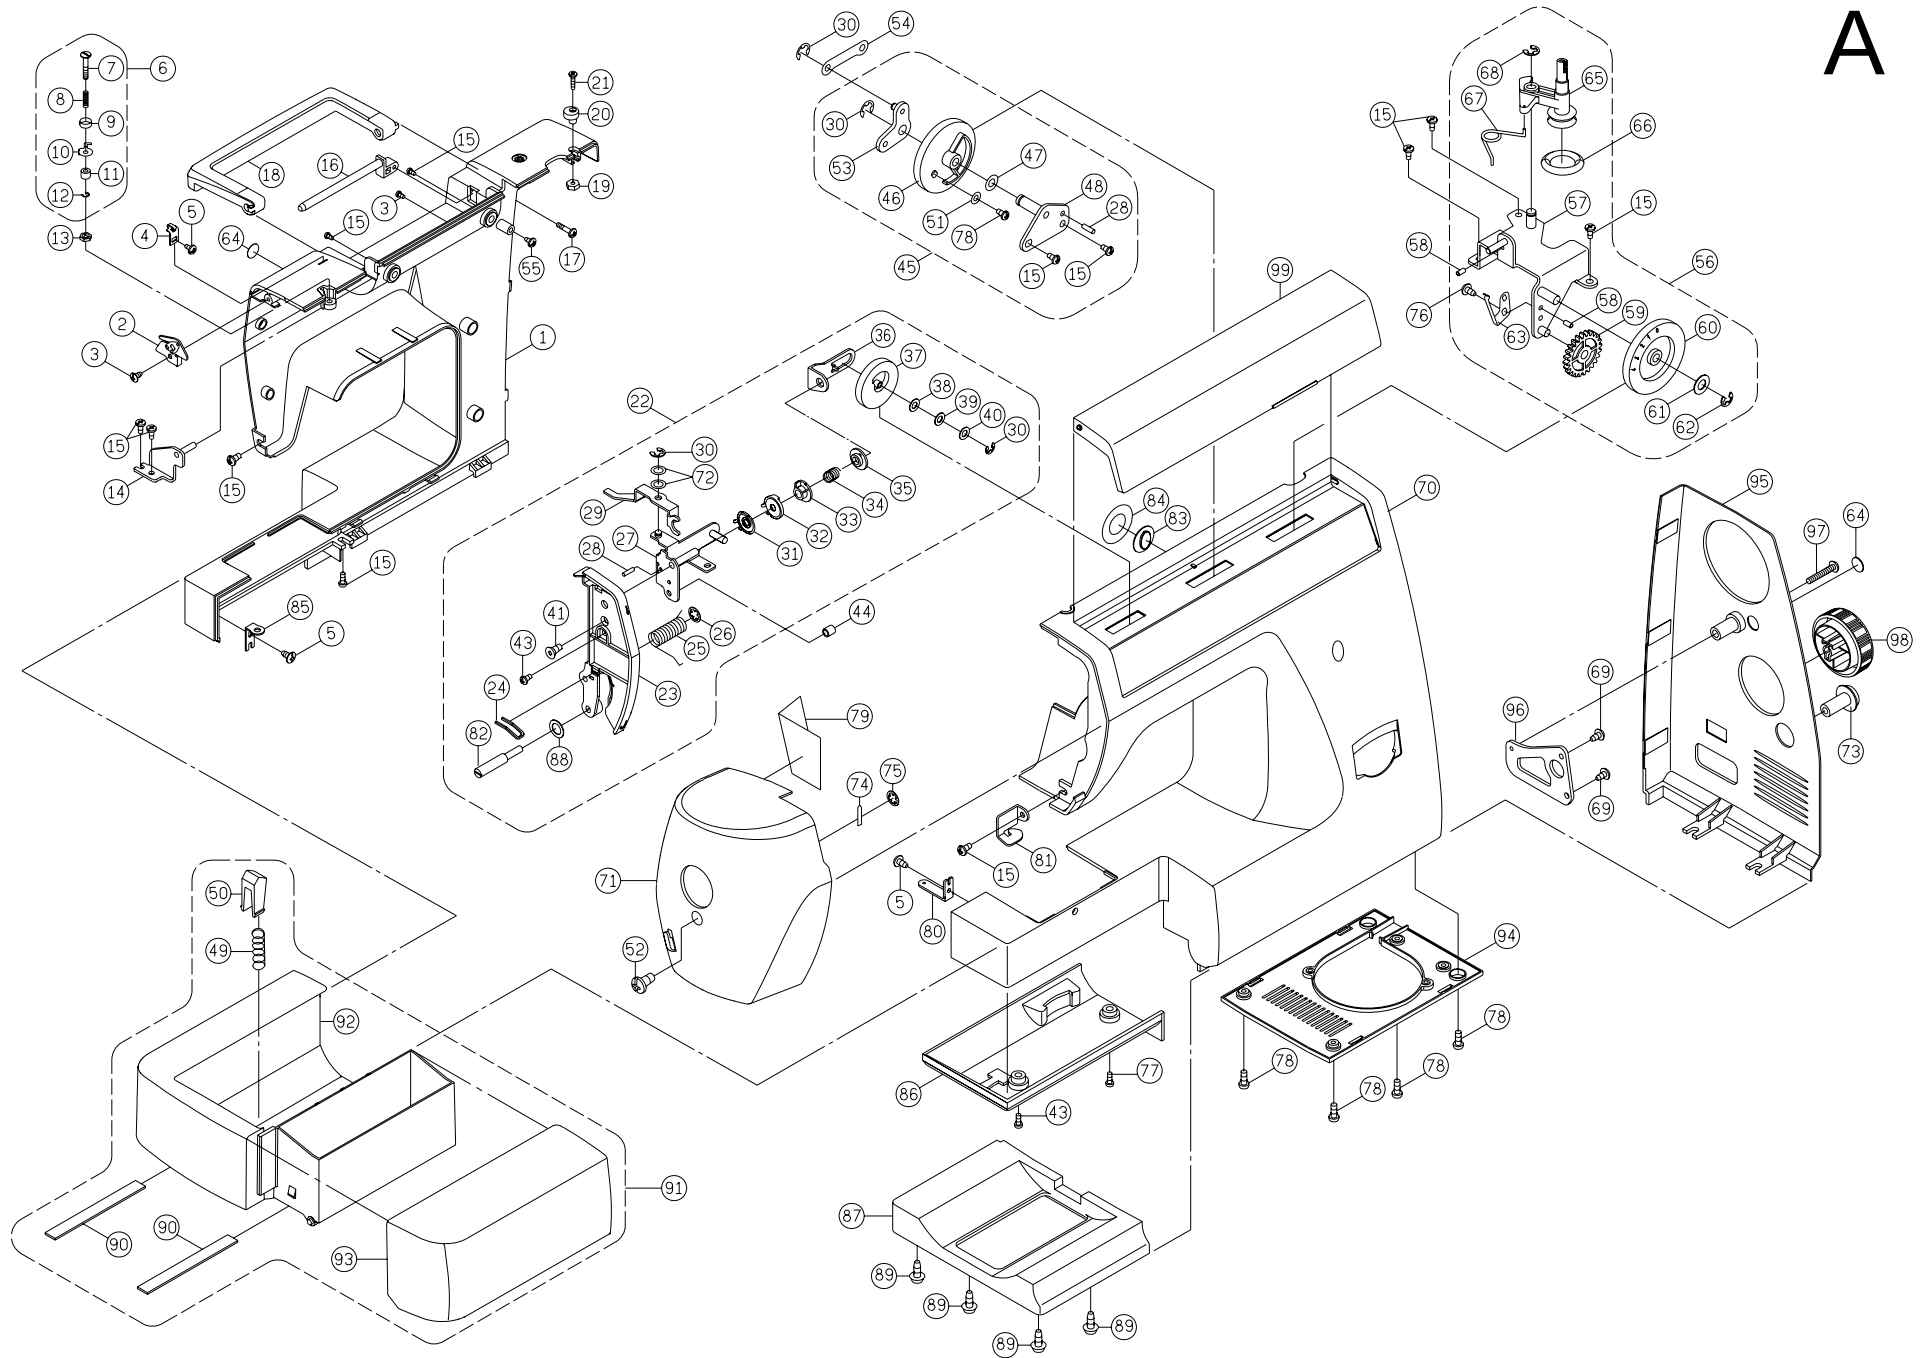

No.	Part No.	Description	Remark
1	E4G0663209	Back cover	
2	V610155000	Thread guide complete	
3	004230326*	Set screw (M3×12B)	
4	E1A2043001	Thread guide	
5	004230216	Set screw (M3×8.5)	
6	E1A2065000	Bobbin winder thread guide complete	
7	E1A2053001*	Bobbin winder thread guide adjusting	
8	H13153001	Bobbin winder thread guide spring	
9	H13133001	Bobbin winder spring disc	
10	V610223001	Bobbin winder thread guide	
11	E1A2353006	Spacer	
12	003010036	E-Ring (ETW-3)	
13	004840106	Nut (ALN-4)	
14	V61253006	Arm top cover plate	
15	004240106*	Set screw (M4×8A)	
16	E1A1663209	Spool rod	
17	004230656	Set screw (M3×1.06B)	
18	E4G0363209	Handle	
19	004706013*	Nut (9/64×40 t=3)	
20	E1A2393000	Bobbin winder stopper	
21	004106162*	Set screw (9/64×40×16)	
22	E4G0035209	Dial tension complete	
23	E4G0053209	Dial tension supporter plate cover	
24	V61873001	Thread guide	
25	E9R0453000	Thread guide spring	
26	003020453*	CS ring (CSTW-4.5)	
27	V630043006	Dial tension supporter plate	
28	003043010	Spring pin (ϕ 3×10×0.6)	
29	E1A2113003	Dial tension waft plate	
30	003010043*	E-Ring (E-4) A-17	
31	E1A2333001	Dial tension disc	
32	J30423001	Dial tension disc (1)	
33	R10593000	Dial tension spring regulator	
34	NB1083000	Dial tension spring	
35	K50193000	Dial tension regulator	


No.	Part No.	Description	Remark
36	V630053006	Dial tension spring plate	
37	E4G7773209	Dial tension knob	
38	004300873*	Washer (5×8×0.5)	
39	004500360*	Washer (WW-5)	
40	004300643*	Washer (5.2×10×0.5)	
41	004240176*	Set screw (M4×6D)	
42	004300676	Washer (3.2×8×0.8)	
43	004240146*	Set screw (M4×15B)	
44	H11103001	Dial tension guide spring tube	
45	E4G8774209	Zig zag width dial complete	
46	E4G8773209	Zig zag width dial	
47	004900063*	Washer(6.2*12*2.0*0.15)	
48	E4G0073006	Zig zag width dial plate	
49	H10143003	Sewing table body guide spring	
50	H10133211	Sewing table body guide	
51	004300076*	Washer (4.2×9×0.5)	
52	004241061*	Set screw (M4×12)	
53	E4G0093006	Zig zag width crank	
54	E4G0103003	Zig zag width crank rod	
55	004240306*	Set screw (M4×10B)	
56	E4GR004209	Bobbin winder frame complete	
57	E4G0125006	Bobbin winder frame	
58	003043006	Spring pin (ϕ 3×6×0.6)	
59	V630193000	Feed regulator gear	
60	E4GR003209	Feed regulator dial	
61	004300186*	Washer (6.2×12×0.5)	
62	003010046*	E-Ring (E-4) A17	
63	E4G0153003	Feed regulator set plate	
64	V61503209	Plate (1)8000	
65	V61165000	Bobbin winder crank complete(8000)	
66	F20213000	Bobbin winder rubber pulley(5200B)	
67	V61563003	Bobbin winder crank spring	
68	003010053*	E-Ring (E-5) C22	
69	004240056*	Set screw (M4×6B)	
70	E4G0653209	Front cover	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

No.	Part No.	Description	Remark
71	E4G7173209	Face plate	
72	004300873	Washer (5×8×0.5)	
73	E1A1703209	Adjusting dial	
74	V630593000	Thread cutter	
75	003020583	Washer (CS-6)	
76	004240676	Set screw (M4×5B)	
77	004240136*	Set screw (M4×12B)	
78	004240046*	Set screw (M4×10B)	
79	E4G0573000	Heat resistant plate	
80	E1A1623002	Arm front cover set plate	
81	E1A1883001	Arm top cover thread guide plate	
82	004240982	Set screw (M4)	
83	E4G0333000	Pattern display window	
84	008465000	Sticker	
85	E1A1673002	Arm back cover set plate	
86	E4G6053209	Free arm base	
87	E4G0403209	Free arm foot bush	
88	004300136*	Washer (4.2×8×0.8)	
89	004230746*	Set screw (M3×12)	
90	E1A1843000	Sewing table body felt	
91	E4G0424209	Sewing table complete	
92	E4G0433209	Sewing table body	
93	E4G0443209	Sewing table body cover	
94	E4G0413209	Cord reel cover	
95	E4G6043209	Motor driver belt cover	
96	E1A1723003	Motor driver belt cover frame	
97	004241106*	Set screw (M4×25)	
98	E4G0463209	Selector dial	
99	E4G0323878	UP COVER	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

B

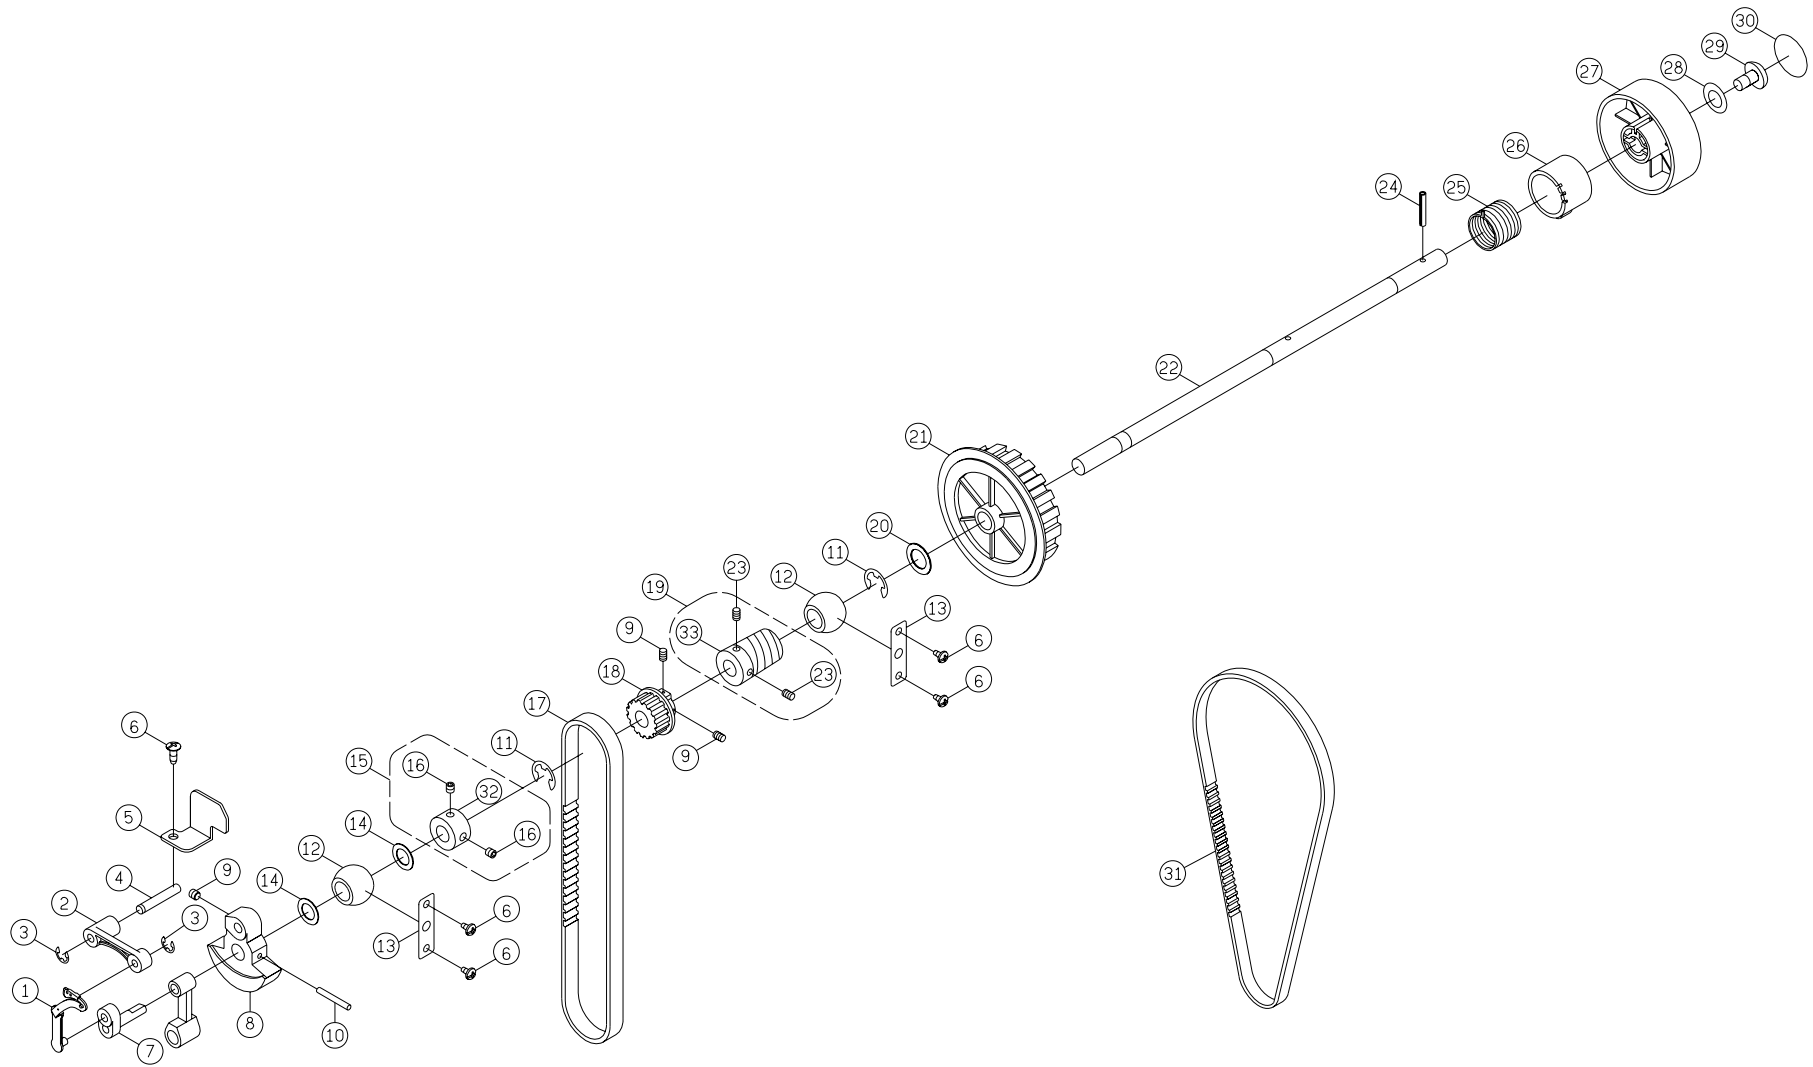

No.	Part No.	Description	Remark
1	E1A2683001	Thread take up lever	
2	E1A2653000	Thread take up lever supporter	
3	003010036*	E-Ring (E-3)	
4	V60223003	Thread take up lever supporter shaft	
5	E1A2313006	Thread take up lever supporter shaft plate	
6	004240106*	Set screw (M4×8A)	
7	E1A2663000	Arm shaft balance pin complete	
8	E1A2213000	Arm shaft balance	
9	004240223	Set screw (M4×6)	
10	003043524*	Arm shaft balance pin (ϕ 3.5×24)	
11	003010093	E-Ring (E-9)	
12	R10293000	Arm shaft bushing	
13	E1A2623003	Arm shaft bushing holder plate	
14	004400080	Endure attrition washer	
15	R10304000	Arm shaft collar complete	
16	004250203*	Set screw (M5×5)	
17	E1A0083000	Motor drive belt	
18	F4A0033000	Arm shaft sprocket	
19	E1A0065000	Arm shaft worm complete	
20	004300853*	Washer (10.2×15×0.5)	
21	E4A0143210	Arm shaft drive belt pulley	
22	E1A0044000	Arm shaft	
23	004107283*	Set screw (11/64×40×5)	
24	003043018*	Spring pin (ϕ 3×18)	
25	R10393000	Arm shaft clutch annulus spring	
26	R10403000	Arm shaft collar	
27	E4G0473209	Hand wheel	
28	004300586*	Hand wheel washer (5.2×16×1.0)	
29	004250346*	Set screw (M5×10)	
30	V16883209	Hand wheel decorated plate	
31	007163471	Motor drive belt	
32	R10313000	Arm shaft collar	
33	E1A0063000	Arm shaft worm	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

This exploded view diagram illustrates the assembly of a sewing machine. The main body (1) is the central component, with various parts shown in their relative positions for assembly. Key components include:

- Top and Needle Assembly:** Components 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90.
- Motor and Drive Components:** Components 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90.
- Base and Foot Components:** Components 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90.

The diagram uses dashed lines to indicate the assembly path and alignment of the parts. The numbers 1 through 90 are used to identify each individual component.

No.	Part No.	Description	Remark
1	E4G0013000	Arm	
2	E1A1373003	BH selector plate	
3	E1A1393003	BH slide plate	
4	004300076*	Washer (4.2×9×0.5)	
5	003010036*	E-Ring (E-3)	
6	004300136*	Washer (4.2×12×1.2)	
7	E1A1413003	BH selector plate	
8	004240056*	Set screw (M4×6B)	
9	E1A1423000	BH select crank	
10	004230016*	Set screw (M3×6A)	
11	E1A1433003	BH select crank shaft	
12	E1A1283003	Zig zag width regulating cam plate	
13	003010043*	E-Ring (E-4) A17	
14	E1A1333003	Zig zag width spring	
15	004300713*	Washer (5.2×10×0.2)	
16	E1A1303002	Zig zag width regulating cam	
17	E1A1323003	Zig zag regulator crank	
18	004240633*	Set screw (M4×0.7) L12	
19	004840106	Set Nut (ALN-4)	
20	E1A1343003	Rod	
21	004240503*	Set screw (M4×4)	
22	E1A0243003	Movement plate supporter (1)	
23	E1A0235000	Movement plate supporter	
24	H10253000	Needle bar bracket (1)	
25	F4A0593003	Reverse crank shaft	
26	E1A0143002	Presser bar	
27	E4G0023003	Presser bar spring	
28	E1A0163003	Presser bar bracket	
29	E1A2093003	Presser bar lifter lever shaft	
30	003010053*	E-Ring (E-5) C22	
31	004240146	set screw (M4×15B)	
32	E1A0173000	Presser bar lifter lever	
33	006910008	Shank complete	
34	004106221	Shank complete set screw (9/64*40*7)L=7	
35	006918008	Zig zag presser foot complete	


No.	Part No.	Description	Remark
36	E1A2323003	Presser bar bracket spring	
37	E3A0253004	Needle plate	
38	NB1293000	Needle plate cover	
39	004240851*	Set screw (M4×6)	
40	NB0233000	Needle plate cover open	
41	E1A2593000	Needle plate cover	
42	004103072*	Set screw (SM3/32×56 L=3)	
43	E1A0584000	Rotary hook plate complete	
44	E1A0603002	Rotary hook plate	
45	H10263000	Needle bar bracket (2)	
46	E1A0103000	Needle bar supporter	
47	NB0533000	Needle bar	
48	003080052*	E-Ring (BETW-5)	
49	E1A1893000	Needle bar supporter pin	
50	003010053	E-Ring (E-5) C22	
51	V61243003	Clutch rod spring	
52	E3A0013003	Needle bar driving rod	
53	E1A2433000	Needle bar driving rod pin	
54	E1A0113000	Auto threaded shaft	
55	R12793003	Auto threaded shaft spring	
56	003042014*	Spring pin (ϕ 2×14)	
57	003042006	Spring pin (ϕ 2×6 t=0.4)	
58	004106233	Set screw (9/64×40×5)	
59	E1A0123000	Auto threaded lever	
60	E4G0293003	Reverse lever spring	
61	E1A2125000	Auto threaded	
62	E1A0193003	Needle bar supporter plate	
63	E1A0203003	Needle bar supporter plate pin	
64	H10205000	Needle clamp complete	
65	R12573000	Needle guide plate	
66	H10223000	Needle bar thread guide	
67	004103011	Set screw	
68	006046148	Needle	
69	M70073002	Auto threaded stopper (1)	
70	004230016*	Set screw (M3×6A)	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

No.	Part No.	Description	Remark
71	F4A3343000	Needle bar crank rod	
72	H50583003	Needle bar supporter spring	
73	E4G0173006	Reverse Crank	
74	F4A0563003	Reverse plate	
75	E1A2613002	Needle bar stopper plate	
76	F4A0603003	Reverse rod	
77	E4G0273209	Reverse button	
78	E1A2103003	BH cam plate	
79	V61205003	Clutch rod complete	
80	V61213003	Clutch rod plate	
81	V61233003	Clutch rod	
82	E1A2603000	Needle plate spring	
83	H10195000	Needle bar bracket complete	
84	H10723003	Tension lever lifter spring	
85	003010056	E-Ring (E-5) C22	
86	F4A0843000	Reverse plate roller	
87	E1A2913000	Needle plate cover plate	
88	004103081	Set screw (SM3/32×56 L=5)	
89	E1A2923000	Needle plate cover spring	
90	004225106	Set screw (M2.5×3)	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

D

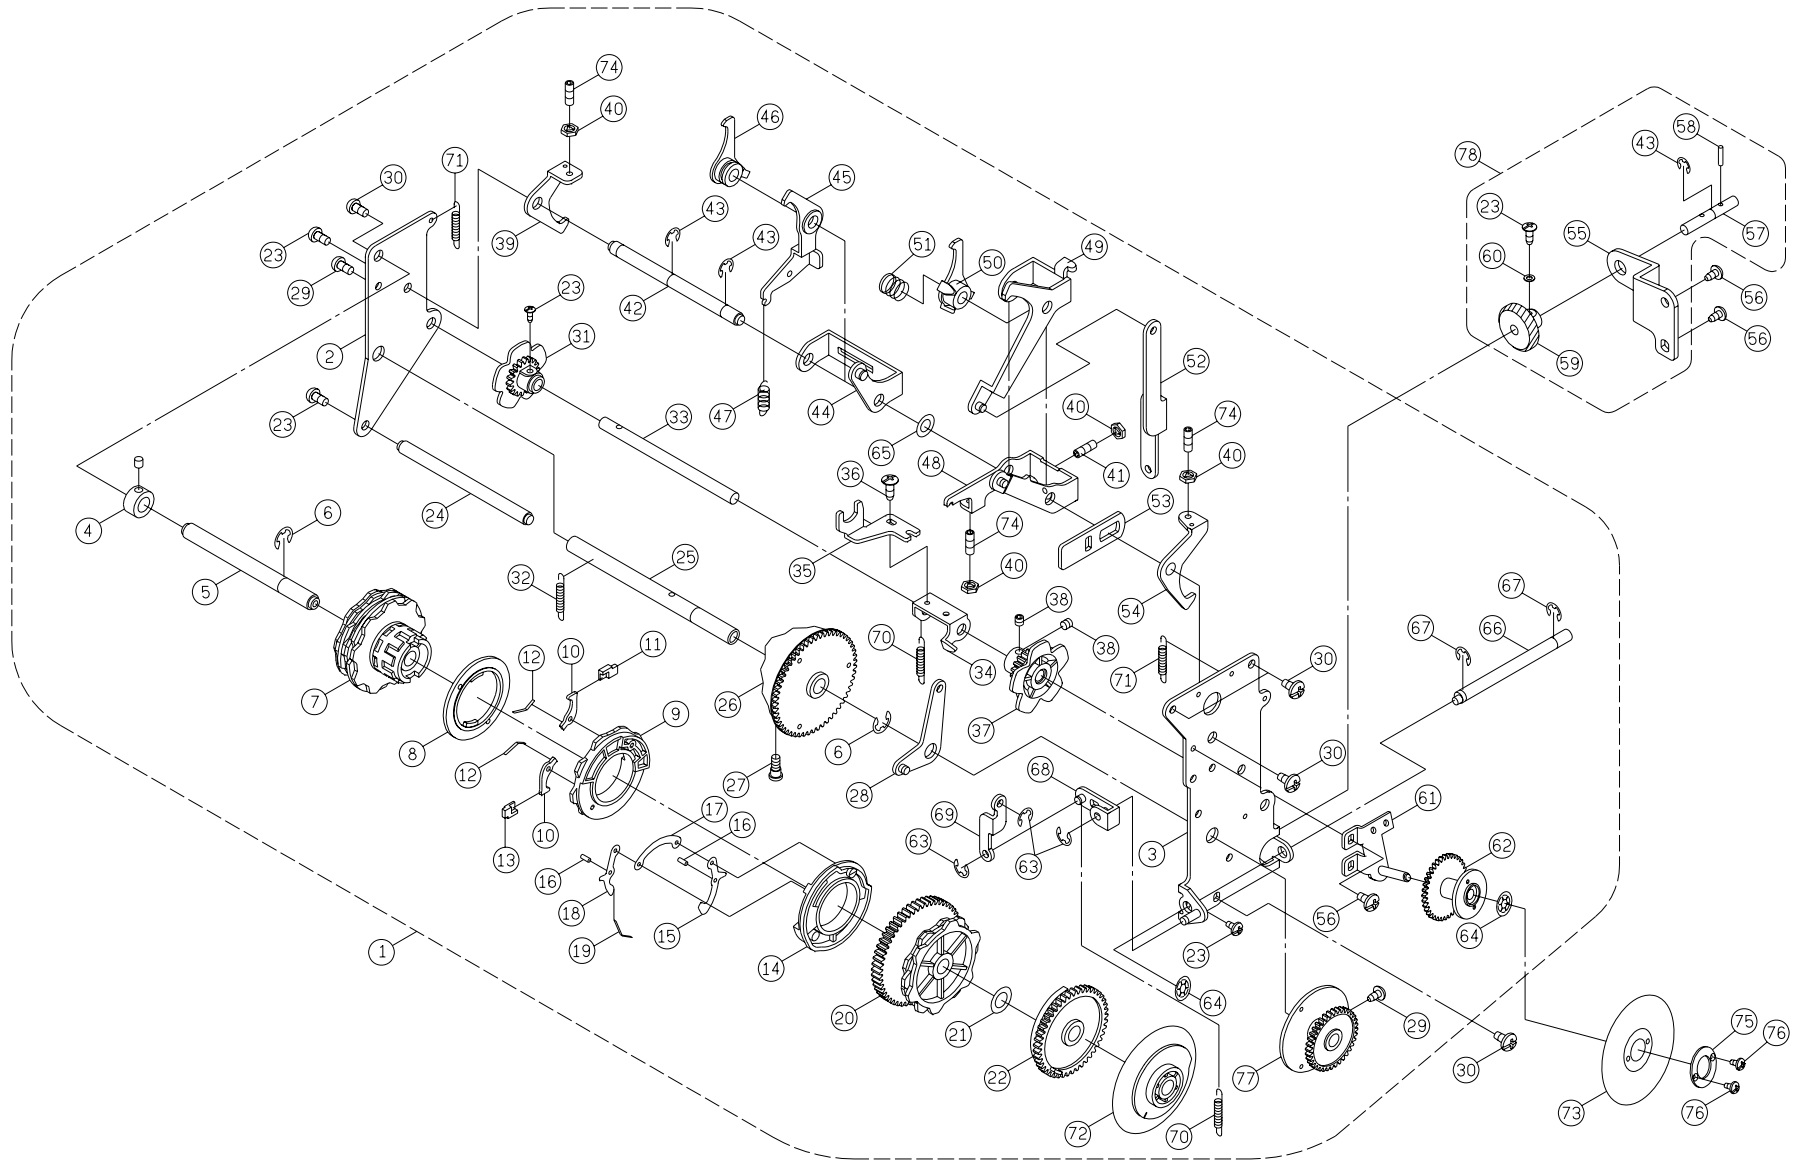


No.	Part No.	Description	Remark
1	E4G0484000	Pattern cam contact complete	
2	E1A0673003	Pattern cam contact plate (back)	
3	E1A0653003	Pattern cam contact plate (front)	
4	H11935000	Pattern cam shaft collar complete	
5	E1A0683003	Pattern cam shaft	
6	003010063*	E-Ring (E-6)	
7	E4A0023000	Pattern cam	
8	E1A0833000	Straight stitch cam	
9	E1A0783000	BH cam	
10	E1A0793002	BH contact	
11	E1A0813000	BH slide block B	
12	E1A0823003	BH contact spring plate	
13	E1A0803000	BH slide block A	
14	E1A0723000	BH feed regulator cam	
15	E1A0743002	BH clutch contact A	
16	E1A0733000	BH clutch shaft	
17	E1A0763002	BH clutch lever	
18	E1A0753002	BH clutch contact B	
19	E1A0773003	BH clutch spring plate	
20	EAA0043000	SS cam	
21	004300863*	Washer (8.2×14×0.5)	
22	EAA0033000	Feed regulator cam	
23	004230286*	Set screw (M3×8B)	
24	E1A1003003	Pattern cam contact supporter shaft	
25	EAA0183003	Pattern selector cam shaft	
26	E4A0043000	Pattern selector cam	
27	004240423	Set screw (M4)	
28	E1A1033003	Pattern selector adjusting lever	
29	004240046*	Set screw (M4×10B)	
30	004240106*	Set screw (M4×8A)	
31	E1A1053000	Zig zag cam	
32	E1A1223003	Feed regulating crank spring	
33	E1A1043000	Pattern selector cam shaft	
34	E1A1073006	Zig zag movement contact	
35	E1A1083003	Movement plate	

No.	Part No.	Description	Remark
36	004230016*	Set screw (M3×6A)	
37	E4A0203000	Stretch stitch release	
38	004240503*	Set screw (M4×4)	
39	E1A0893003	Zig zag release plate	
40	004840106*	Nut (ALN-4)	
41	004240633*	Set screw (M4×0.7) L12	
42	E1A0843000	Zig zag cam contact supporter shaft	
43	003010056*	E-Ring (E-5) C22	
44	E1A0853003	Zig zag cam contact supporter	
45	E4A0033003	BH Feed crank	
46	EAA0063003	Zig zag cam contact	
47	E1A0973003	BH Feed crank spring	
48	EAA0093003	BH adjusting crank	
49	EAA0073003	SS cam contact supporter	
50	EAA0083003	SS cam contact	
51	E1A0903003	Zig zag release plate	
52	E1A0943003	Feed rock shaft	
53	E1A0983003	BH adjusting plate	
54	E1A0993003	Stretch stitch release plate	
55	F4A3303003	Selector dial plate	
56	004240056*	Set screw (M4×6B)	
57	E4G0533006	Selector dial shaft	
58	003042516	Spring pin (ϕ 2.5×16)	
59	F4A3113000	Selector gear	
60	004300676*	Washer (3.2×8×0.8)	
61	E4G0283006	Pattern gear plate	
62	E1A1203000	Pattern gear	
63	003010036*	E-Ring (E-3)	
64	003020043	CS-ring (CSTW-4)	
65	004300833*	Washer (6.6×14×0.25)	
66	E4G0523000	Adjusting shaft	
67	003010043*	E-Ring (ETW-4)	
68	E1A1123003	BH adjusting hook holder	
69	E1A1133003	BH adjusting rod	
70	M70093000	Auto threaded lever spring	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

No.	Part No.	Description	Remark
71	H70553003	Spring	
72	EAA0023000	Stretch stitch selector cam	
73	E4GD003210	Pattern selector plate	
74	004241093*	Set screw (M4×0.7) L9	
75	E1A1213006	Pattern selector plate	
76	004220076	Set screw (M2×0.4) L6	
77	E1A1173000	Zig zag selector cam	
78	E4G0534000	Selector dial plate complete	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

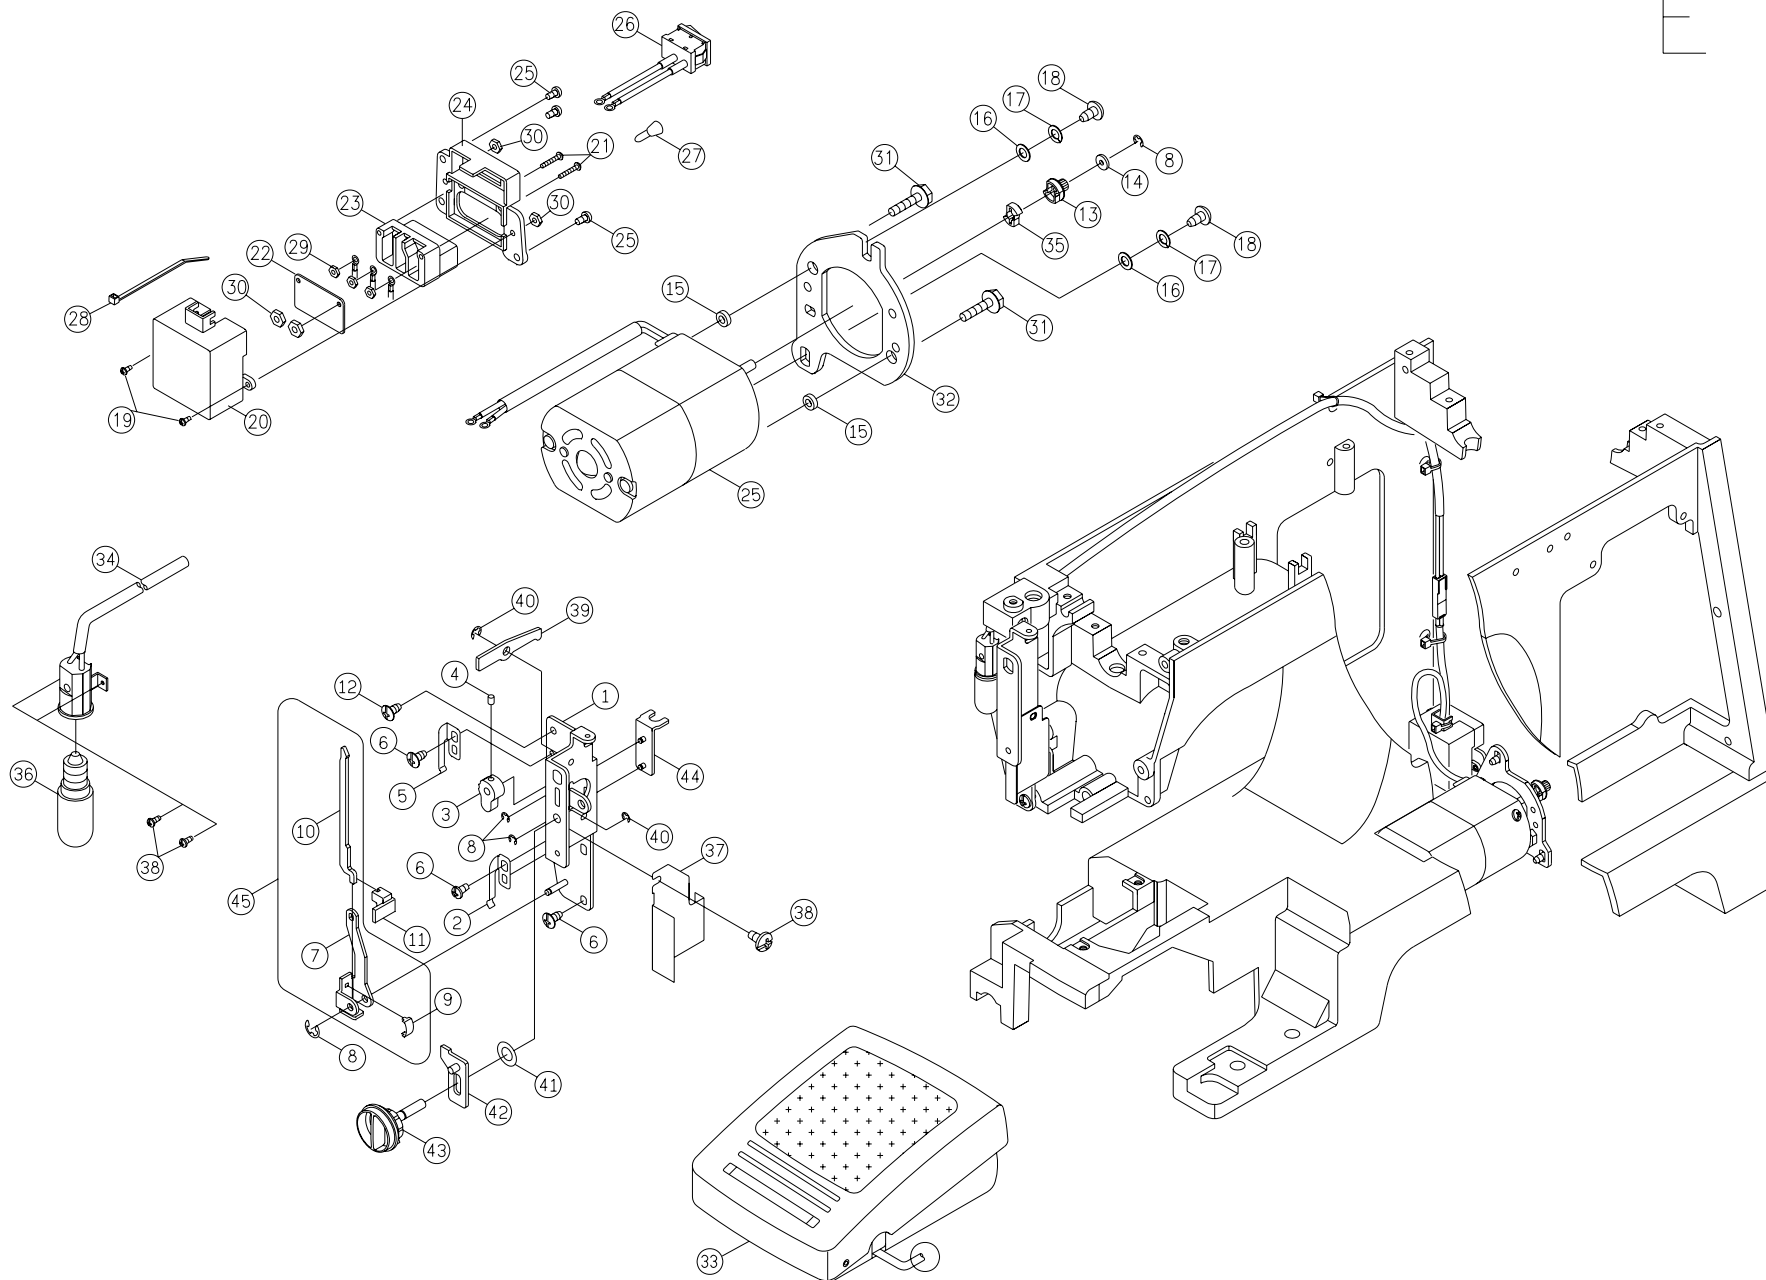


No.	Part No.	Description	Remark
1	E4G0193006	BH lever plate	
2	E1A1533003	BH positioned plate	
3	E1A1513000	BH movement crank	
4	004230433	Set screw (M3×3)	
5	E1A1523003	BH positioned plate	
6	004240056	Set screw (M4×6B)	
7	E1A1473003	BH lever crank	
8	003010036	E-Ring (ETW-3)	
9	E1A1483003	BH lever spring plate	
10	E1A1493002	BH lever	
11	E4A6003209	BH lever button	
12	004240106	Set screw (M4×8A)	
13	002396029*	Belt wheel	
14	002145029	Motor feed regulator collar	
15	004300966*	Washer (4.2×8×2.5)	
16	004300306	Washer (5.4*10*0.9)	
17	004600296	Spring washer (5.2*9*1)	
18	004250086	Set screw (M5*12)	
19	004230286	Set screw (M3*8 B)	
20	E1A1973210	Receptacle holder cover	
21	004230865	Set screw (M3*20)	
22	002621129	Concert insulation plate	
23	002624129	Receptacle	
24	002134129	Receptacle holder	
25	001164209	Motor complete (for 230V) HF(S)-07250	
26	002425118	Switch ass'y	
27	AA0463000	End termed	
28	002027129	Cord clip	
29	004840120	Nut (M3*4)	
30	004830016	Nut (M3 t=2.3)	
31	004241428	Set screw (M4*10.2)	
32	002503125	Motor bracket	
33	001165209	Foot controller (KD-2902) 230V	
34	002424118	Lamp holder complete (only for 220V-240V)	
35	008059302	Cushion rubber	

No.	Part No.	Description	Remark
36	005240011	Lamp (240V,E-14)15W	
37	E1A2373000	Light resistant plate	
38	004230056*	Set screw (M3×5B)	
39	E4G0223003	Pressure plate crank	
40	003010046	E-Ring (ETW-4)	
41	004300936	Washer (8.2*12*0.5)	
42	E4G0233006	Pressure plate	
43	E4G0253209	Pressure adjusting button	
44	E4G0213003	Presser bar spring holder plate	
45	E1A1475000	BH lever crank asay's	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

F

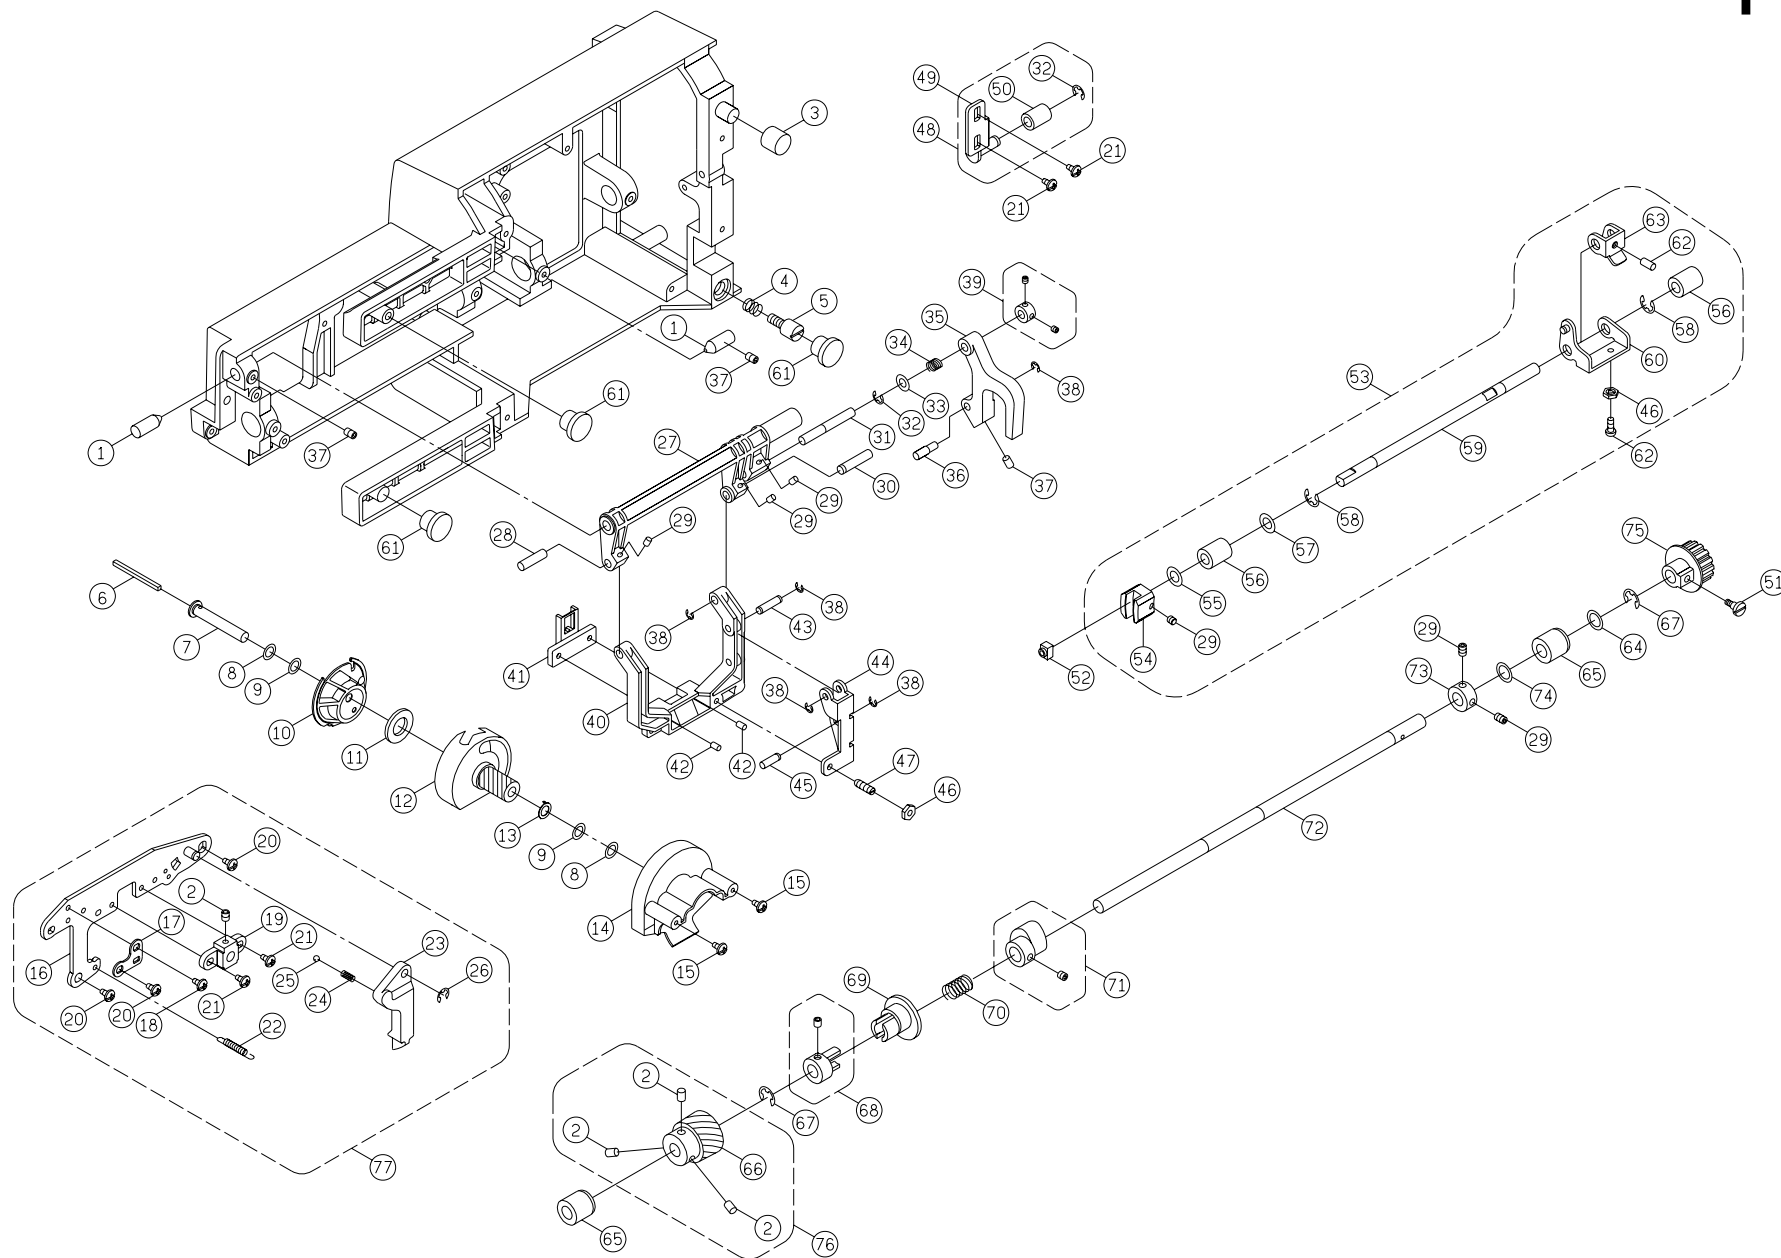

No.	Part No.	Description	Remark
1	E1A0463000	Feed crank shaft	
2	004240033*	Set screw (M4×5)	
3	H70043000	Free arm vase cushion rubber	
4	E1A2573006	Base plate adjustment screw spring	
5	K82133006	Base plate adjustment screw	
6	NB0693000	Bobbin shaft oil cloth	
7	E1A2033000	Bobbin shaft	
8	NB0673000	Bobbin shaft washer (2)	
9	004400840	Endure attrition washer	
10	Nb1275000	Shuttle hook complete	
11	NB0643000	Magnet	
12	Nb1265000	Shuttle hook holder	
13	NB0683000	Bobbin shaft washer (3)	
14	E1A0563000	Shuttle hook cover	
15	004230066*	Set screw (M3×12)	
16	E1A0523000	Rotary hook holder	
17	E1A0553000	Rotary hook holder positioned plate	
18	004240056*	Set screw (M4×6B)	
19	E1A0543000	Rotary hook supporter	
20	004240586*	Set screw (M4×8)	
21	004240106*	Set screw (M4×8A)	
22	E1A2343003	Feed dog frame spring	
23	E1A0573209	Feed lifting shaft	
24	E1A1873003	Feed lifting shaft spring	
25	H12883000	Steel ball	
26	003011043*	E-Ring (E-4)	
27	E1A0373000	Feed rock shaft	
28	E1A0403003	Feed rock frame shaft (2)	
29	004240503*	Set screw (M4×4)	
30	E1A0423003	Feed rock frame shaft (1)	
31	E1A0383003	Feed rock bushing pin (1)	
32	003010043*	E-Ring (ETW-4)	
33	004300643*	Washer (5.2×10×0.5)	
34	E1A2023003	Feed shaft spring	
35	E1A2083210	Feed rock crank	


No.	Part No.	Description	Remark
36	F30323003	Feed rock crank pin	
37	004240223*	Set screw (M4×6)	
38	003010036*	E-Ring (ETW-3)	
39	F30284000	Feed rock shaft collar	
40	E1A0413000	Feed rock frame	
41	E3A0033001	Feed dog	
42	004104012*	Set screw (1/8×44×5)	
43	E1A0443003	Feed lifting rock crank pin (1)	
44	E4A0223002	Feed lifting rock crank	
45	E1A0453003	Feed lifting rock crank pin (2)	
46	004840106	Adjusting nut (ALN-4)	
47	004240633	Feed back crank screw	
48	E1a2944000	Belt adjusting plate complete	
49	E1a2943000	Belt adjusting plate	
50	H12323000	Belt adjusting plate pulley	
51	004230673*	Set screw (M3×14.5)	
52	F30333000	Feed regulating block	
53	E1A0474000	Feed regulating plate complete	
54	F30353000	Feed regulating	
55	004400570*	Endure attrition washer	
56	R11443000	Feed rock bushing	
57	004300123*	Washer (6.7×12×1)	
58	003011052*	E-Ring (ETW-5)	
59	E1A0483003	Feed regulating shaft	
60	E1A0503003	Feed regulating crank	
61	E1A2503000	Free arm vase cushion rubber	
62	004240046*	Set screw (M4×10B)	
63	E1A0493003	Feed crank	
64	004300936*	Washer (8.2×12×0.5)	
65	E1A0283000	Lower shaft bushing	
66	NB0503000	Lower shaft gear	
67	003010063*	E-Ring (ETW-6)	
68	E1A0305000	Feed lifting rock cam complete	
69	E1A0290000	Feed lifting rock cam	
70	E1A0333003	Lower shaft spring	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

No.	Part No.	Description	Remark
71	E1A0325000	Feed rock cam complete	
72	E1A0273000	Lower shaft	
73	V11553003	Lower shaft collar	
74	004400830	Endure attrition washer	
75	E1A0313000	Lower shaft belt pulley	
76	NB0495000	Lower shaft gear complete	
77	E1A0574209	Rotary hook holder complete	

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.

G

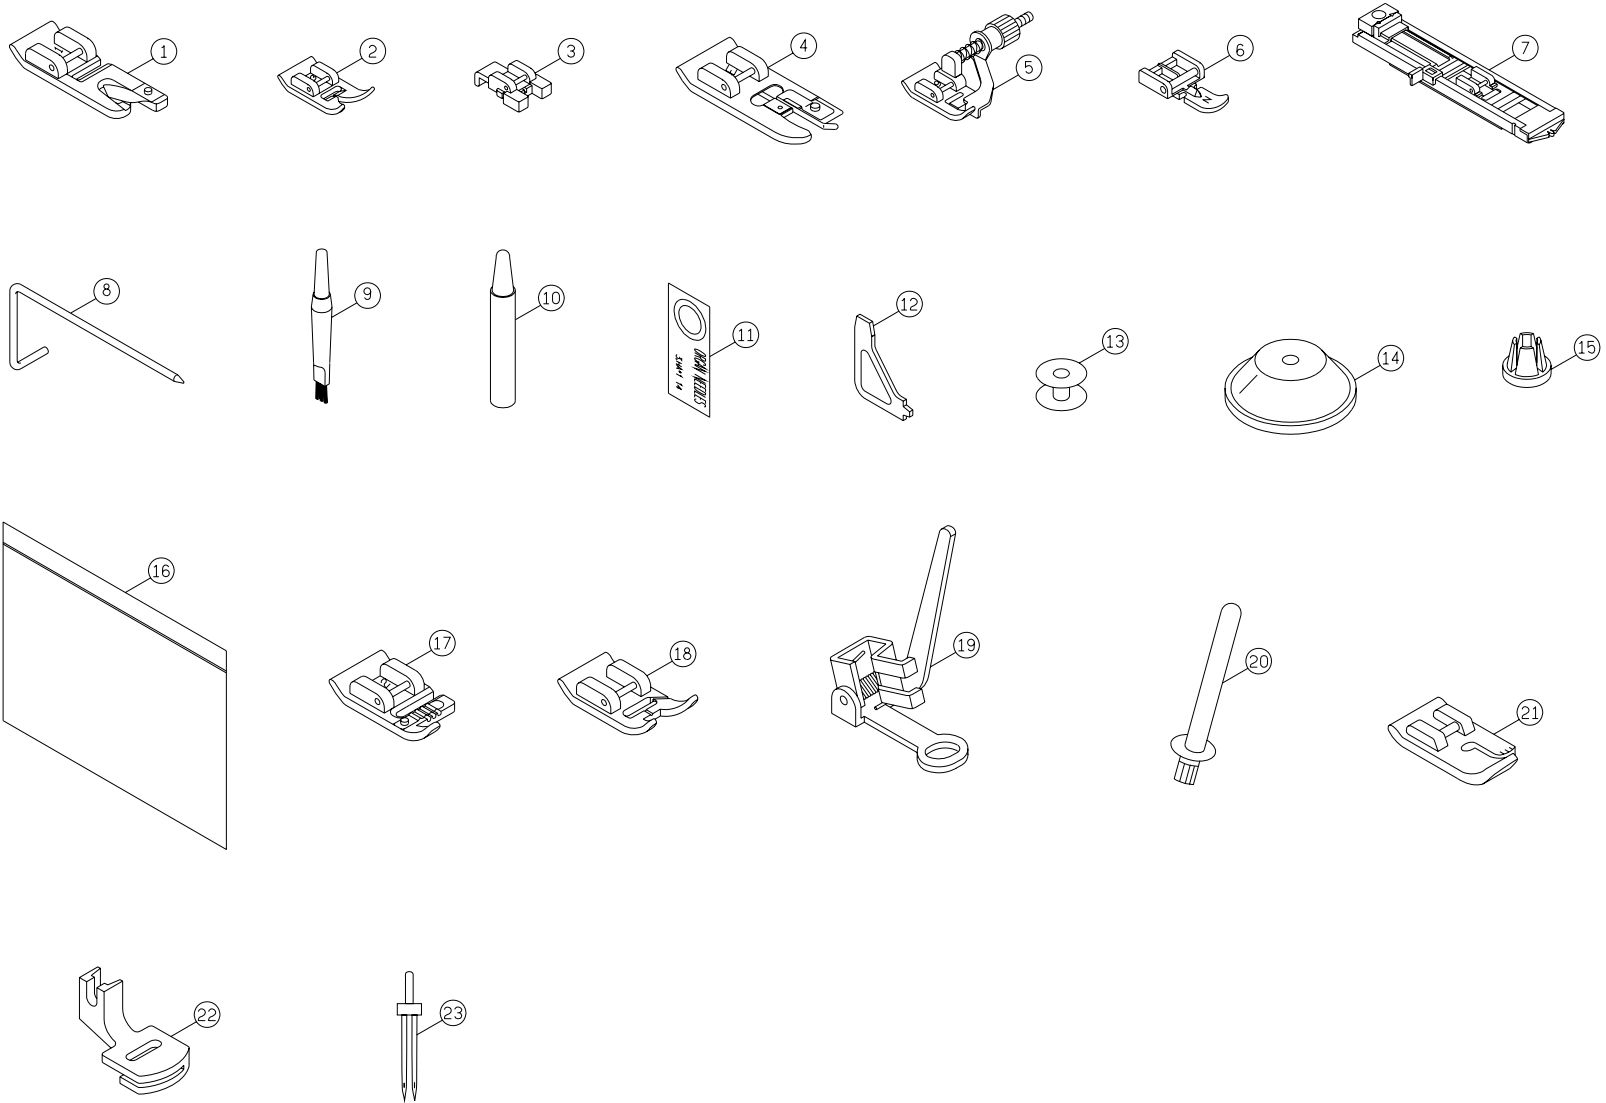

No.	Part No.	Description	Remark
1	006900008	Hammer foot (K)	
2	006918008	Zig zag foot (C)	
3	006914008	Button foot	
4	006907008	Overcastting foot (E)	
5	006904008	Blind hem foot (F)	
6	006905008	Zipper foot (I)	
7	006171008	Buttonhole foot (D)	
8	006008001	Quilting bar	
9	006099008	Brush & Seam ripper complete	
10	006013009	Oilier	
11	006014148	Needle	
12	006093009	Large & Small screw drive	
13	006084009	Bobbin	
14	R12373209	Spool set plate	
15	TA10943209	Spool set plate (small)	
16	006011009	Accessories bag	
17	006813008	Cording foot (M)	
18	006172008	Satin stitch foot (A)	
19	006016008	Darning foot	
20	R60033209	Second spool pin	
21	006916008	Quilting foot	
22	006917008	Gathering foot	
23	006020008	Twin needle	

NOTE: When you order any spare parts from us, please cooperate with us by writing.

- (1) Section & Sequence No.
- (2) Name of parts
- (3) Voltage, if necessary
- (4) Others, if any

A210E4G05

AUG 29, '07

***means: These spare parts are not supplied individually, but can be obtained by minimum quantity at 300 pcs.